SUPPORT SOFTWARE FOR CHD PRODUCTS

INSTALLATION / LAUNCHING

We have prepared software generator for easy creation of SysEx messages for programming of MXC-56 interface. Any programming message can be created with the help of this generator without difficult calculation of hexadecimal numbers. Generator is based on Java scripts so it is possible to use it with any operation system, but a browser (MS-Explorer, Netscape, etc.) must be installed on the computer.

Program can be launched either directly from supplemental CD-ROM or from hard disk of a PC. If you choose to launch the program from hard-disc, it is necessary to copy "index.html", "MXC-56 system.html", "MXC-56 output.html", "MXC-56 output. 56_help.html" files and subfolder "media" from "support\syxgen\" folder of CD-ROM to

selected folder on your computer's hard disk.

Users of MS-Windows operating system can use self-extracting archive "MXC-56_syxgen.exe". In this case, it is necessary to insert path to target folder of hard disk (by direct input of text or by selecting path by pressing the "..." button) and then to press "OK" button. All needed files are then copied automatically.

Launching SysEx Messages generator can be then done by simply opening "index.html" file in a browser.



SETTING AND PROGRAMMING OF PARAMETRS

After "index.html" file launching, window with menu of generators is opening. Requested generator starts after clicking on its name in "Launch" column.

"Exit" button in lower left corner of the table closes browser window.

◀H▶ MIDI to DMX-512 Converter MXC-56 (Model 8-462, v. 1.0) Index of SysEx Messages Generators				
Generator Name	Launch	Description		
System Parameter / Bank	System	Changes of partial parameter in system's edit buffer or parameters in system bank in memory.		
Output Parameters Bank	Output	Changes of output parameters in output bank in memory.		
CHD Home Page		Copyright © 2008 CHD Elektroservis		

System Parameters:

Systems parameters control hardware of MXC-56.

Names of parameters are in left column of generator's table. Values of parameters can be selected in combo-boxes in middle column of the table.

"Device ID" is necessary. ID number must be the same as number of actual receiving MIDI channel or universal ID can be used. Universal ID will be accepted anytime by MXC-56 independently on MIDI channel setting.

After setting of value of a parameter and clicking on corresponding "Generate" button in right column of the table, SvsEx message for temporary change of one parameter is created ("Change System Parameter").

"Generate All" button generates SysEx message for permanent changes of all parameters in internal memory ("Data Save / Load"). Values of all parameters must be set before that message creating.

MIDI System Exclusive Messages are generated in hexadecimal form as a text. Text form of hexadecimal numbers can be chosen by "Hex Byte Form" combo-box, delimiter between bytes can be chosen by "Delimiter" combo-box.

Then it is necessary to transfer the message from text field of the generator to SysEx Msg editor of any musical software (Cubase™, Cakewalk™, Sonar™, Midi OX etc.) and then to transmit it to MXC-56. Text of generated message can be transferred for example by clipboard: Select the text by mouse (cursor), copy it to clipboard by pressing Ctrl+C keys and paste it into editor of musical software by pressing Ctrl+V keys.

"Reset" button clears the text field and sets all comboboxes to default values.

"Back" button in lower left corner of the table closes generator window and returns menu window.

"Help" button in lower left corner of the table opens new window with brief help.

Select Device ID :	Universal	V	
System Parameter Name :	Select Value :		Message:
DMX Shift	1	V	Generate
MIDI Channel	16	V	Generate
MIDI Mode	Controller	~	Generate
MIDI Shift	36	V	Generate
Master CC Nr.	7	~	Generate
Blackout CC Nr.	16	V	Generate
Foot Switch Function	Blackout	V	Generate
SysEx Message:	17.		<u></u>
Select Hex Byte Form:	"FF"	V	
Select Delimiter:	space	V	
F0 00 20 21 7F 14 3	30 03 24 15 F7	7	
	Generate All Re	eset	
	edit buffer. generate "Bulk Dump bank. s "Back" for return to r	Load" mess	age for system memo
Back Help	p" (or see manual) for	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ation. ioht © 2008 CHD Elektros

Output Parameters:

Output parameters control DMX outputs directly.

Names of parameters are in left column of generator's table. Values of parameters can be selected in select-boxes in middle column of the table.

"Device ID" is necessary. ID number must be the same as number of receiving MIDI channel (chosen by DIL switch on front panel of MDCB-2) or universal ID can be used. Universal ID will be accepted anytime by MDCB-2 independently on MIDI channel setting.

"Output Nr." is necessary too. It specifies output for changes of parameters.

"Generate All" button generates SysEx message for changes of all parameters of selected output in internal memory ("Data Save / Load"). Values of all parameters must be selected before that message creating.

MIDI System Exclusive Messages are generated in hexadecimal form as a text. Text form of hexadecimal numbers can be chosen by "Hex Byte Form" combo-box, delimiter between bytes can be chosen by "Delimiter" combo-box.

Then it is necessary to transfer the message from text field of the generator to SysEx Msg editor of any musical software (Cubase $^{\text{TM}}$, Cakewalk $^{\text{TM}}$, Sonar $^{\text{TM}}$, Midi OX etc.) and then to transmit it to MXC-56 converter. Text of generated message can be transferred for example by clipboard: Select the text by mouse (cursor), copy it to clipboard by pressing Ctrl+C keys and paste it into editor of musical software by pressing Ctrl+V keys.

"Reset" button clears the text field and sets all selectboxes to default values.

←HD MIDI to DMX-512 Converter MXC-56 (Model 8-462, v. 1.0) Output parameters setting Output parameters. Output paramet					
Select Device ID :	Universal				
Select Output Nr. :	1				
Output Parameter Name :	Select Value :				
Default Value	0				
Conversion Curve	Linear				
Preheat	0				
Limit	255				
Accept Master	Yes				
Accept Blackout	Yes				
SysEx Message:					
Select Hex Byte Form:	"FF"				
Select Delimiter:	space				
F0 00 20 21 7F 14 20 00 00	60 00 00 6C F7				
Generate	Reset				
Remarks: Press "Generate" button to generate a "Bulk Dump Load" message for an output memory bank. Press "Back" for return to main menu. Press "Help" (or see manual) for more information.					
Back Help	Copyright © 2008 CHD Elektroservis				

"Back" button in lower left corner of the table closes generator window and returns menu window.

"Help" button in lower left corner of the table opens new window with brief help.