


CR78-PGM

Controller & Programmer for Roland CR-78

Model 8-501
ver. 1.0

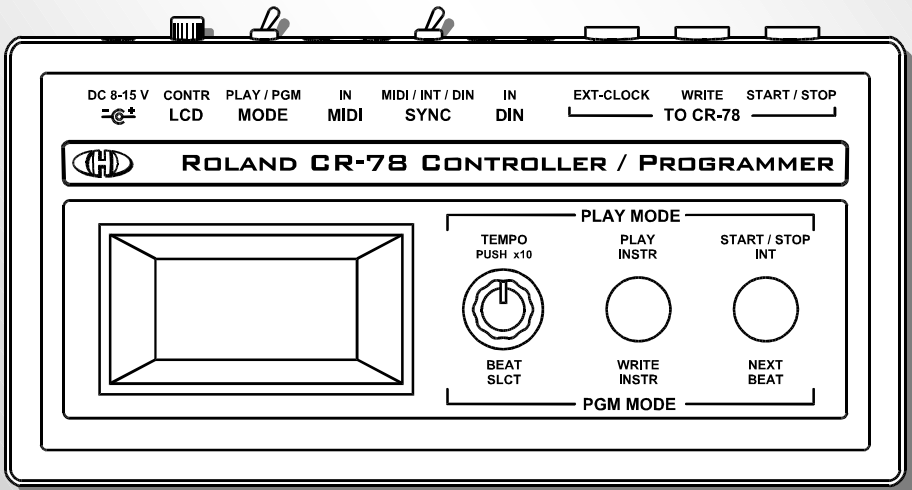

HARDWARE TESTS





Content

	page
HW tests	3
1) Test of display	3
2) Test of buttons	3
3) Test of switches	3
4) Test of rotary encoder	4
5) Test of DIN-SYNC input	4
6) Test of MIDI-IN input	4
7) Test of EXT-CLOCK output	5
8) Test of WRITE output	5
9) Test of START/STOP output	6
10) End of tests	6

Manufacturer :

CHD Elektroservis

Nad kundratkou 27, 19000 Praha 9
Czech Republic

info@chd-el.cz

www.chd-el.cz



HW TESTS

Operating system of CR78-PGM controller contains routines for checking of functionality of own hardware. Tests can be done if the device does not work properly in harness with CR-78.

For enter into testing mode, press INSTR and NEXT buttons and hold them pressed. Then turn the device on – connect supply adapter. After that, all dots are displayed on device's display. Now INSTR and NEXT buttons can be depressed.

1) TEST OF DISPLAY

Test of display is launched automatically immediately after entering into testing mode. All dots or blank area are displayed alternately on all positions of the display (all dots luminous or all dots hidden):



Also functionality of LCD contrast regulator (LCD-CONTR) can be tested during this test (with LCD-CONTR regulator).

Continue to next test occurs automatically after any of INSTR or NEXT buttons or knob of rotary encoder is pressed.

2) TEST OF BUTTONS


Status of INSTR and NEXT buttons is displayed during this test. If some of buttons is pressed, symbol „X“ is shown under abbreviation of corresponding button.



Continue to next test occurs automatically after both INSTR and NEXT buttons are pressed.

3) TEST OF SWITCHES

Status of MODE and SYNC switches is displayed during this test.. Actual position of some of switches is shown under abbreviation of corresponding switch.

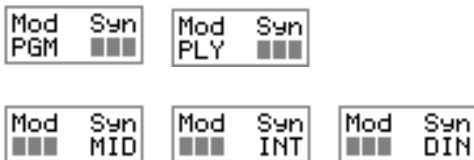

For continue to next test, NEXT button must be pressed.



4) TEST OF ROTARY ENCODER

Number displayed on left side of the display can be incremented or decremented by turning of rotary encoder clockwise or counter-clockwise. Step of increment / decrement is ± 10 or ± 1 in dependence on pressing of rotary encoder knob – step is ± 10 for pressed knob and ± 1 for depressed knob. Step size is indicated by symbol “x10” or “x1” on right side of the display.




For continue to next test, NEXT button must be pressed.

5) TEST OF DIN-IN INPUT

The display shows actual status of DIN-SYNC bus signals on DIN-IN input. Symbol “C” is used for Clock signal and symbol “R” is used for Run signal. Signals Reset and Fill are not used in the controller.




Signals can be incoming to DIN-IN input from any DIN-SYNC transmitter or external source of DC voltage (from 4 to 5 volts) can be used – see picture:

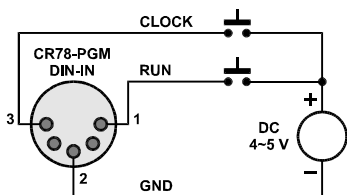

For continue to next test, NEXT button must be pressed.

6) TEST OF MIDI-IN INPUT


Display shows actual status of Transport MIDI commands received from MIDI transmitter on MIDI-IN input:



Default status (no received MIDI command) is displayed as dashes.



Symbol “CLK” is shown on left side of the display every time when Clock MIDI command (status byte F8h) is received on MIDI input. The symbol is shown for approx. 0,2 sec.



On right side of the display, symbol of last received Transport MIDI command is shown. The symbol is "STR" for START command (status byte FAh) or "CON" for CONTINUE command (status byte FBh) or "STP" for STOP command (status byte FCh).


For continue to next test, NEXT button must be pressed.

7) TEST OF EXT-CLOCK OUTPUT

Status of the output copies status of INSTR button. Actual status is shown on the display simultaneously. +5V voltage level is on EXT-CLOCK output if the button is pressed and 0V voltage level is on the output if the button is depressed.



Status of the output can be checked with DC voltmeter or with help of testing circuit – see picture:

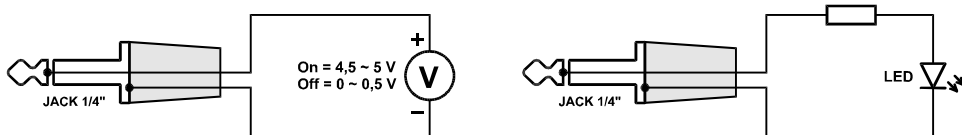

For continue to next test, NEXT button must be pressed.


8) TEST OF WRITE OUTPUT

Status of the output copies status of INSTR button. Actual status is shown on the display simultaneously.

Contacts of WRITE output are opened if the button is pressed (ON status). If the button isn't pressed, contacts of WRITE output are connected (OFF status).



Status of the output can be checked with short-circuit tester or with help of testing circuit – see picture:

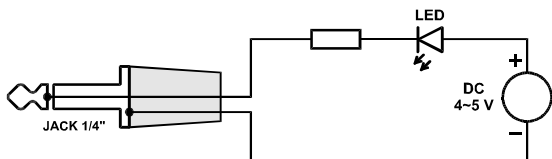

For continue to next test, NEXT button must be pressed.




9) TEST OF START / STOP OUTPUT

Status of the output copies status of INSTR button. Actual status is shown on the display simultaneously. Contacts of START/STOP output are opened if the button is pressed (ON status). If the button isn't pressed, contacts of START/STOP output are connected (OFF status).




Status of the output can be checked with short-circuit tester or with help of testing circuit – see picture:

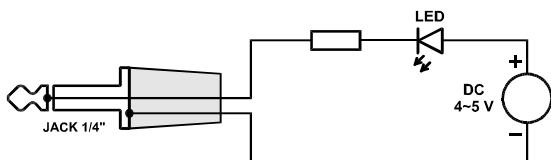

For continue, NEXT button must be pressed.

10) END OF TESTS

All available tests are executed now. Display shows info:



Exit from testing mode can be done only by turning the device off – by disconnecting of supply adapter from CR78-PGM.

If no error occurs during testing procedures, the device is fully functional and it should to work with CR-78 drum machine correctly. If the device doesn't work with CR-78 in this case, some mistake can be in used interconnecting cables or in CR-78 drum machine.

If any hardware error occurs during testing procedures, the device must be repaired in specialized workshop.



CHD Elektroservis

Nad kundratkou 27, 19000 Praha 9
Czech Republic

info@chd-el.cz
www.chd-el.cz

